How to adjust the temperature on GY-04 digital controller.



Use the screwdriver to open the plastic cover which marked in Red.



There are two buttons under the cover, one is "hot port", and the other is "Cold port". If the real temperature is lower than digital controller shown, you can adjust the "hot port"; Clockwise to Raise temperature; anticlockwise to low temperature.

If the real temperature is higher than digital controller shown, you can adjust the "Cold port". Clockwise to Raise temperature; anticlockwise to low temperature.