



## HOW TO HANG A KATZ DISPLAY BOARD

Never hang sign with the hangers or cable slanted inward. This causes the board to curl.

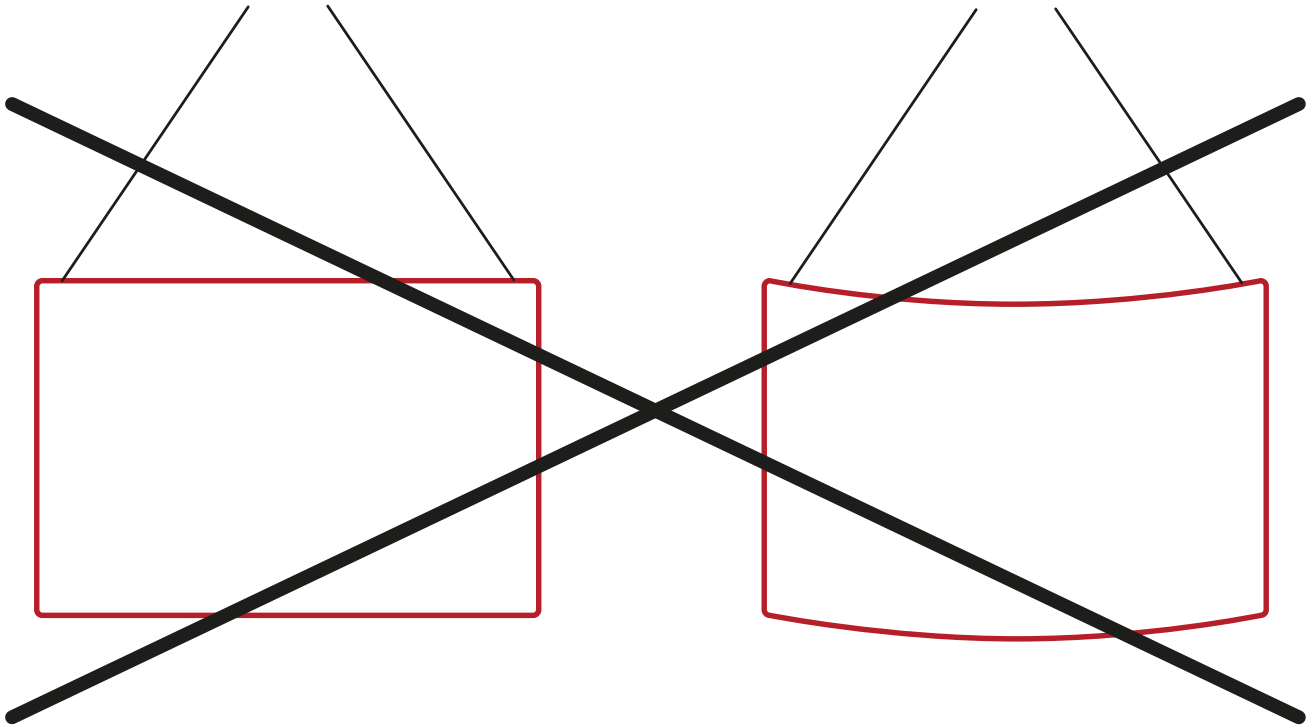

Hangers or cables must be slanted outwards for proper hanging.

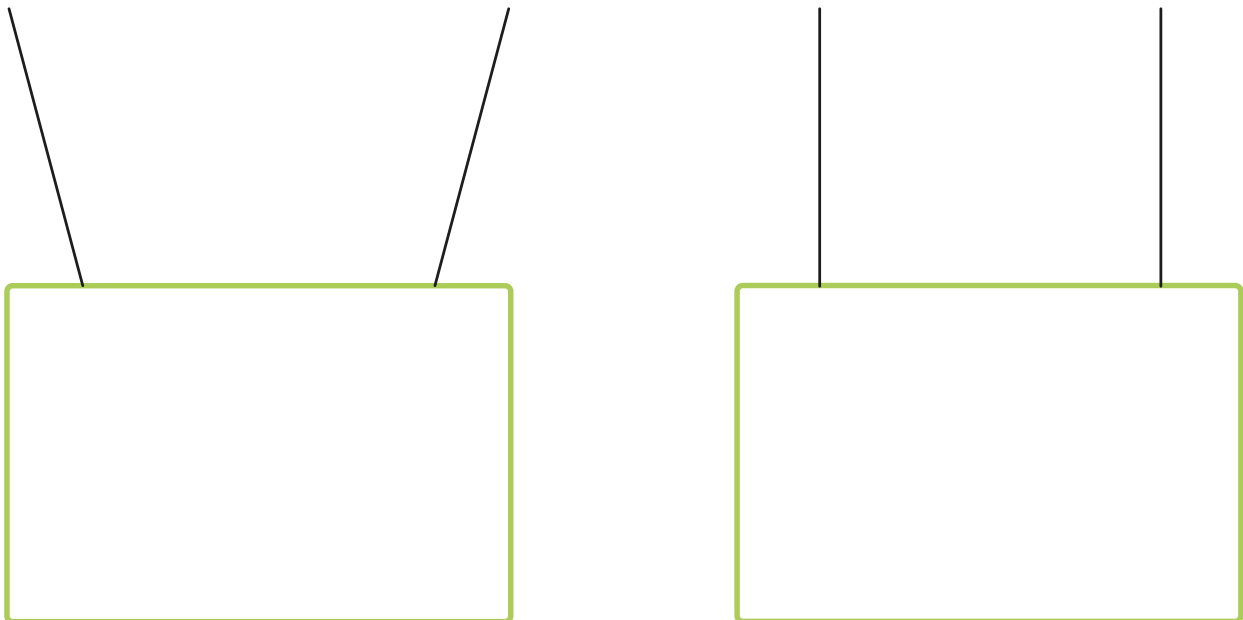

Other external influences like strong heat or cold might effect the board's flatness.